WIFI SMART SOCKET
With energy metering

On/Off Plug-In Switch

Function Key and Indicator Description:

Short press the power button, red indicator lights up means power on, red indicator lights off means power off.

Long press the power button for about 5 seconds, blue indicator flashes means the product begin enter into the distribution network mode.

Blue indicator flashes slowly means the network connection is abnormal, please check the router or network configuration.

Technical Parameters:

Maximum current: 16A
Rated voltage: 220-240V
Rated power: 3500W（Max）
Input voltage: 220-240V
Wireless Type: Wi-Fi 2.4GHz
Operating temperature: -10 ℃ - 50 ℃
Support system: Android \IOS
Turn On Intelligence

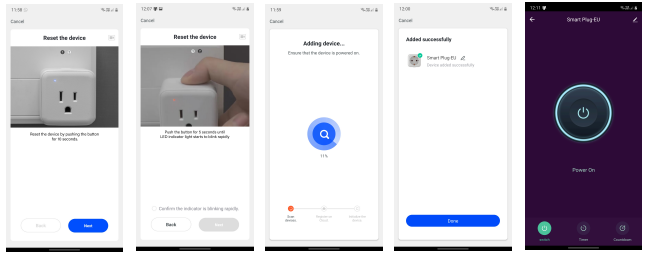

Software

The free **Emax Smart Home / Smart Life** App is required to operate your Wi-Fi Smart Socket. It's available on the App store and Google Play store for Android and IOS devices.

1.Ensure your IOS / Android device is connected to the internet using a Wi-Fi network.
2.Open the App store/Google Play store on your phone.
3.Search for "**Emax Smart Home / Smart Life**" in the App store/Google Play store.
4.Download the **Emax Smart Home / Smart Life** App to your phone.

Registration

You'll need to register an account on your "Emax Smart Home / Smart Life" app before you can connect your Wi-Fi Smart Socket.

1. Open the App on your IOS / Android device
2. Ensure you click on ALLOW to enable you to control your Wi-Fi Smart Socket.

3. Please register by clicking on Register in the top right corner of the App. You will be prompted to enter your mobile number or email address to register. Note: If you use a Mobile number you will be sent a text message with your confirmation code to complete your account registration.
4. Once you receive your confirmation code type it in along with a password for the "Emax Smart Home / Smart Life" App and select confirm. You can use this to log in to APP.
5. You are now ready to set up your Wi-Fi Smart Socket.

Connecting your Smart Socket to Wi-Fi

1. Plug your Wi-Fi Smart Socket into an electrical socket and Switch it on.

2. Open up your app and select the + Icon on the top right of the App to add device.
3. Select "Plug" as the Device Type. The App can also be used to control other compatible Smart Devices.
4. Select "Plug" as the Device Type. The App can also be used to control other compatible Smart Devices.

Select "Finish Network Configuration" when the blue LED is flashing quickly.

If the blue LED light isn't flashing quickly when you've plugged in your Smart Socket keep the Power button in the centre of your Wi-Fi Smart Socket pressed for 5 seconds to reset the device.

5. The App will automatically detect the Wi-Fi network you are connected to. Enter the password of the Wi-Fi Router you are connected to.

Click "Next" when you've entered your Wi-Fi password and the blue LED light is flashing every two seconds

6. Once paired, you will see the following screen with the device you have successfully added. If you do not see this message repeat from Step 1 or refer to the FAQS at the back of the manual for more information.

Note: The configuration process should take about 1 minute Max.

CORRECT DISPOSAL OF BATTERIES IN THIS PRODUCT

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other wastes for disposal.

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.